


0 1 2 3 4 5 6 7 8 9 10 11 12 13 14

A
B
C
D
E
F
G
H
J
K

DATE: 1-8-66
JOB NUMBER: UG6062

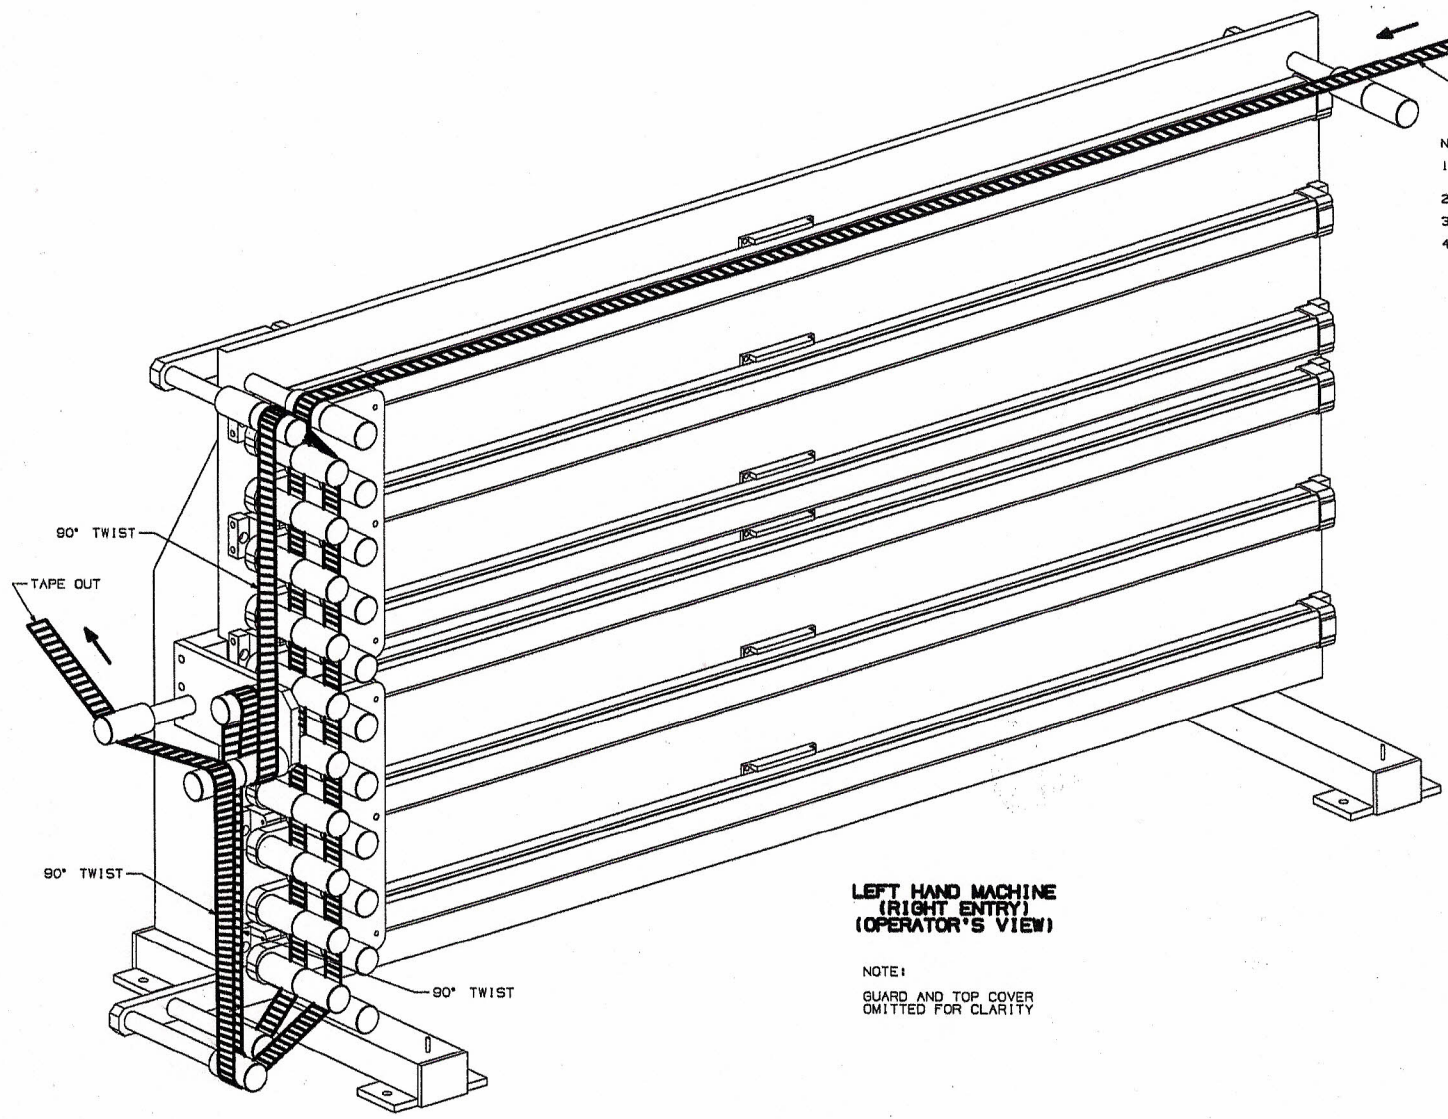

NOTES:

1. SWITCH ALL ZONES TO THREAD POSITION PRIOR TO THREADING.
2. SWITCH ALL ZONES TO RUN AFTER THREADING.
3. SET ALL AIR CONTROLS PER LAYOUT.
4. TOP SIDE OF TAPE GOING INTO MACHINE SHALL BE TOP SIDE COMING OUT OF MACHINE.

**LEFT HAND MACHINE
(RIGHT ENTRY)
(OPERATOR'S VIEW)**

NOTE:
GUARD AND TOP COVER
OMITTED FOR CLARITY

CM80AK153-1G

| | | | |
|---------------------|--|---------------------------|--|
| FOR ASSY. SEE SH 1A | 1E-1 | THREADING OF L.H. MACHINE | AT&T - PROPRIETARY THIS DRAWING CONTAINS INFORMATION OF A PROPRIETARY NATURE AND IS TO BE USED ONLY FOR THE PURPOSES SPECIFICALLY STATED HEREON. IT IS NOT TO BE REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT THE WRITTEN PERMISSION OF AT&T INTELLECTUAL PROPERTY SERVICE. |
| | RECORD | DESCRIPTION | |
| | DUAL PASS ACCUMULATOR THREADING GUIDE LEFT HAND (RIGHT ENTRY) MACHINE VERSION | | |
| | DESIGNED | SCALE: NONE | |
| | R.A. WILLIAMS | R.L. MOORE | 1G ATLANTA |
| | AT&T | SIZE | DRAWING NO. |
| | | 6S | CM80AK153 |

A
B
C
D
E
F
G
H
J
K

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14